

# MANUAL TRANSMISSION / DIFF TEMP SENSOR

Insert the temperature sender into the large bushing. This will replace the rear differential housing fill plug on the back cover. To monitor manual transmission temperature, locate the appropriate location for the sender to fit.

NOTE: Not all locations will accommodate the size of the sender or the bushings supplied in the kit. An alternative location may need to be found, or a sender or bushing may have to be purchased to be installed in the desired location.

## Wiring Diagram - w/Remote Temp Sensor (with X-Monitor)

